
FKLHBO

KEYLOC INTEGRATION HARNESS
INSTALLATION GUIDE

Thank you for your purchase!

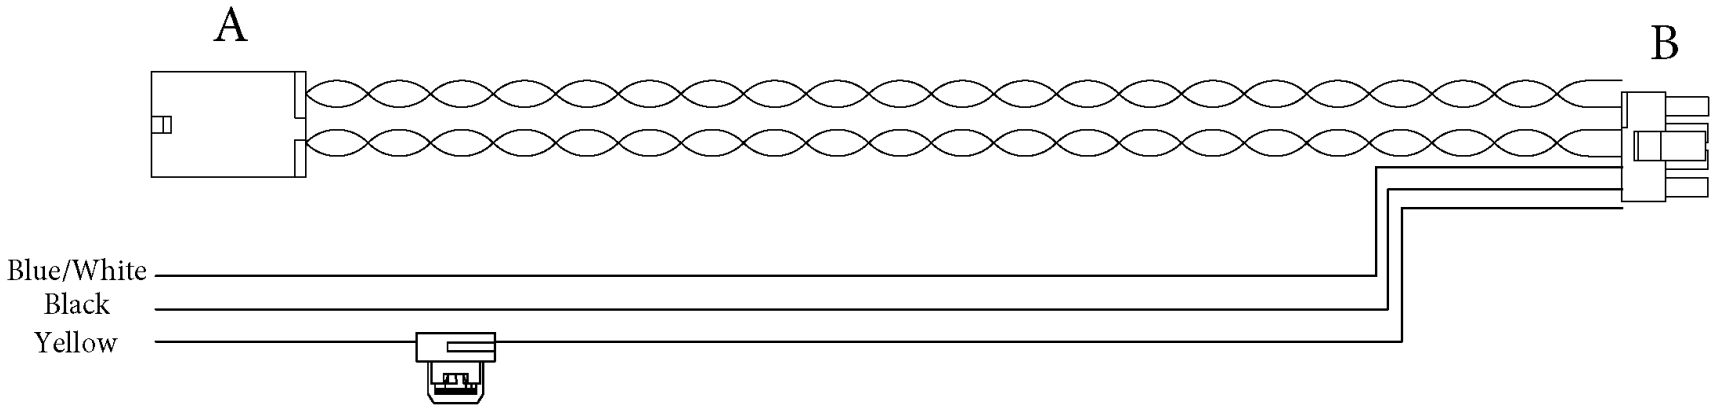

A → FD-3 T-Harness · B → KeyLOC · Power leads → amplifier (see reverse)

SETUP & POWER CONNECTIONS

YOUR KEYLOC IS PRE-PROGRAMMED — NO TUNING REQUIRED

Please **do not adjust any settings**, and make sure the **Hi/Lo button on the KeyLOC stays pressed in**.

YELLOW **12V CONSTANT**	Connect to the **same constant 12V feed that runs to the battery for your aftermarket amp.** A built-in in-line **10A fuse** protects this lead — keep the fuse in place.
BLACK **GROUND**	Connect to the **same ground that runs to the battery for your aftermarket amp** — not the vehicle chassis.
BLUE / WHITE **REMOTE**	Connect to the amplifier's **remote turn-on** terminal.

Tip: All three leads may be landed right at the amplifier's power, ground, and remote terminals.